

PMS #2935 Blue


3" x 6" designs



PMS #021 International Orange



PMS #347 Green

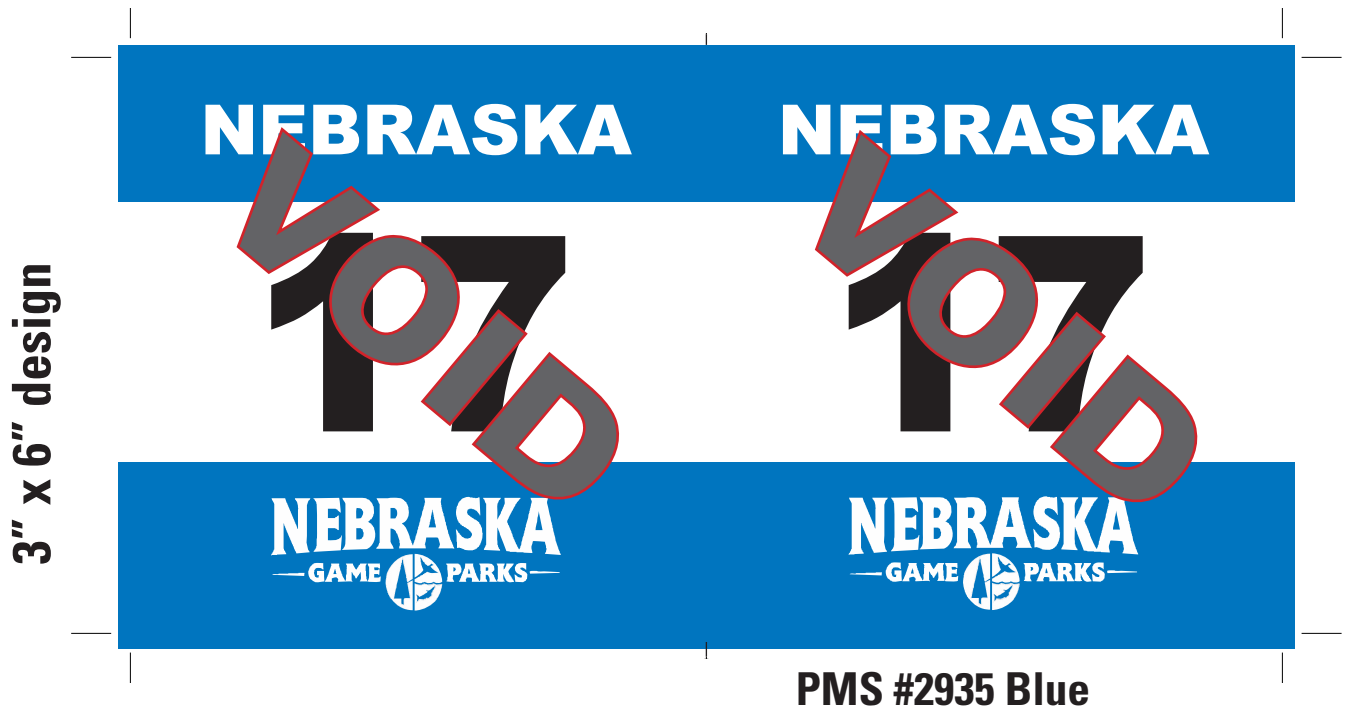

One design has a 1/4" gutter for bleed. 3"X6.25"



Back for decals measuring 3 x 6"

Application Instructions

1. Thoroughly clean area on your boat where the emblem is to be applied. Be sure to allow enough time for the area to dry before placing the emblem on the boat.
2. Carefully remove decal from the liner.
3. Apply face up to dry surface.
4. Smooth out any air bubbles.

This identification symbol must be affixed to the left of the letters "NB" without a spacer and in the same horizontal plane as the first letter.

Application Instructions

1. Thoroughly clean area on your boat where the emblem is to be applied. Be sure to allow enough time for the area to dry before placing the emblem on the boat.
2. Carefully remove decal from the liner.
3. Apply face up to dry surface.
4. Smooth out any air bubbles.

This identification symbol must be affixed to the left of the letters "NB" without a spacer and in the same horizontal plane as the first letter.

Back for decals measuring 3 x 6.25" (1/4" gutter for bleed)

Application Instructions

1. Thoroughly clean area on your boat where the emblem is to be applied. Be sure to allow enough time for the area to dry before placing the emblem on the boat.
2. Carefully remove decal from the liner.
3. Apply face up to dry surface.
4. Smooth out any air bubbles.

This identification symbol must be affixed to the left of the letters "NB" without a spacer and in the same horizontal plane as the first letter.

Application Instructions

1. Thoroughly clean area on your boat where the emblem is to be applied. Be sure to allow enough time for the area to dry before placing the emblem on the boat.
2. Carefully remove decal from the liner.
3. Apply face up to dry surface.
4. Smooth out any air bubbles.

This identification symbol must be affixed to the left of the letters "NB" without a spacer and in the same horizontal plane as the first letter.